verilux®
The Healthy Lighting Company® Est. 1956

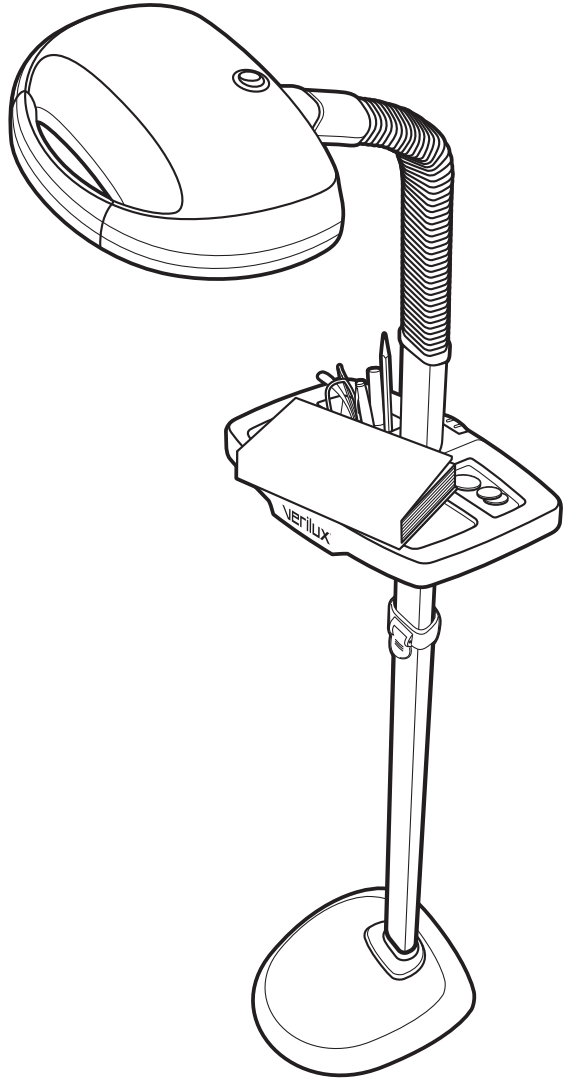

EasyFlex® | Deluxe

VF02

Natural Spectrum® Floor Lamp

verilux®
The Healthy Lighting Company® Est. 1956

Dear Customer,

Thank you for purchasing the Verilux EasyFlex® Deluxe Natural Spectrum® Floor Lamp. You have received a quality product, backed by a one-year limited warranty.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.verilux.com to request a free catalog and learn more about all our quality Verilux products, or call our toll-free number 1-800-454-4408.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a Bright Day!



Nicholas Harmon
President, Verilux, Inc.

Important Safety Instructions

SAVE THESE INSTRUCTIONS

Thank you for purchasing the EasyFlex® Deluxe Natural Spectrum® Floor Lamp. Please read the following safety information before using. To reduce the risk of fire, electrical shock, or injury to persons:

- Do not dismantle.
- Do not alter power cord.
- Turn off/unplug and allow to cool before replacing bulb or cleaning.
- For indoor use only.

General Precautions

- The lamp is an electrical device. Do not use near water.
- Before plugging in the lamp, check to make sure the voltage of the wall socket does not exceed 120 volts.
- Not for use with light dimmers, timers, motion detectors or extension cords.
- This product may cause interference with radios, cordless telephones or devices that use a wireless remote control such as televisions. If interference occurs, move the product away from the device, plug the product or device into a different outlet or move the lamp out of the line of sight of the remote control receiver.
- Unplug from electrical outlet for extended periods of non-use or during lightning storms to ensure protection of the electronics.

WARNING: Do NOT use lubricating agent in assembly; please see troubleshooting section if you are having difficulty assembling your lamp.

WARNING: Do not use the lamp outside or in wet locations such as bathrooms. It is intended for indoor, dry use only.

WARNING: This product contains Mercury in the bulb. Dispose of bulb per local regulations.

Getting Started

Main Parts & Controls

A. Ergonomic Handle
B. Lamp Head
C. High/Off/Low Switch
D. Gooseneck
E. Shaft
F. Ergonomic Height Adjustment Lever
G. Lamp Base
H. Power Cord
I. Ballast
J. LED Indicator
K. Bulb
L. Parabolic Light Diffuser

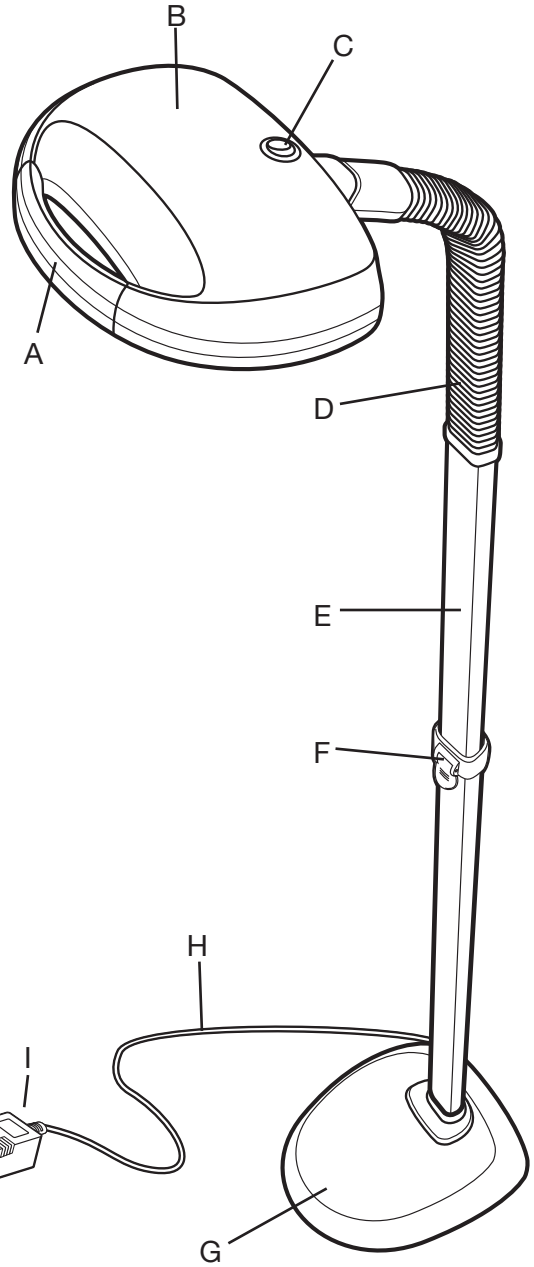

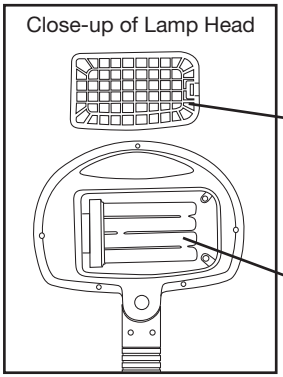

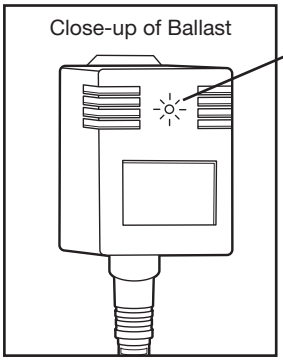

Getting Started — continued

Please Read Instructions Carefully Before Using the EasyFlex®.

1. Unpack lamp carefully, removing all packaging material, and confirm you have all parts shown in the diagram. For your convenience, the bulb has been inserted into the socket.
2. Remove all pieces from box. Locate the 2 screws and tightening tool in the plastic bag and set aside.
3. Detach the red plastic pieces and store them in the event you need to return the lamp.
4. The clear plastic sleeve on the shaft is specially designed to tear away easily. To avoid scratching the metal shaft, do not use a sharp object to cut the plastic.

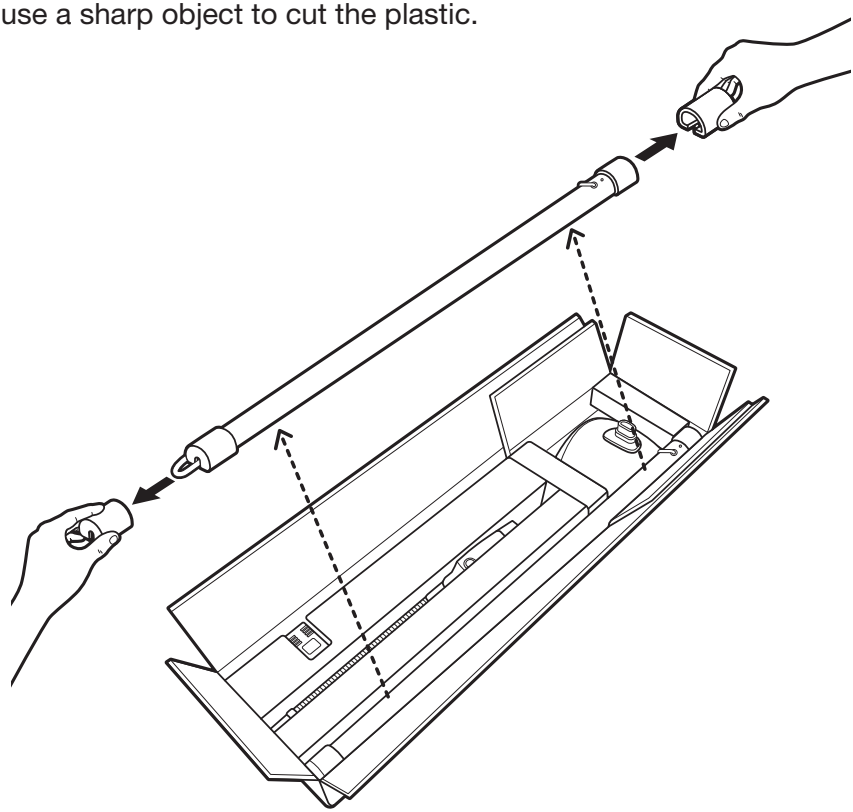

IMPORTANT NOTE: Remove red plastic protective pieces prior to assembly.

Assembly Instructions

1. Set the lamp base on the floor and insert the lamp shaft over the base support unit until the screw holes line up as shown in Fig. 1. Insert the screw using the tightening tool and turn clockwise to tighten.

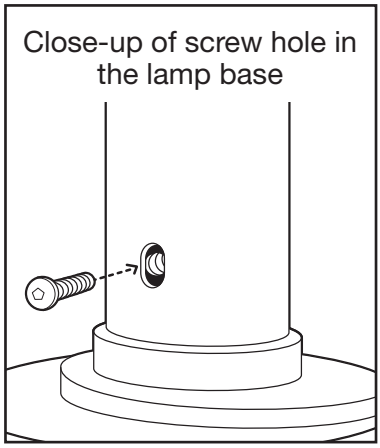

Fig. 1

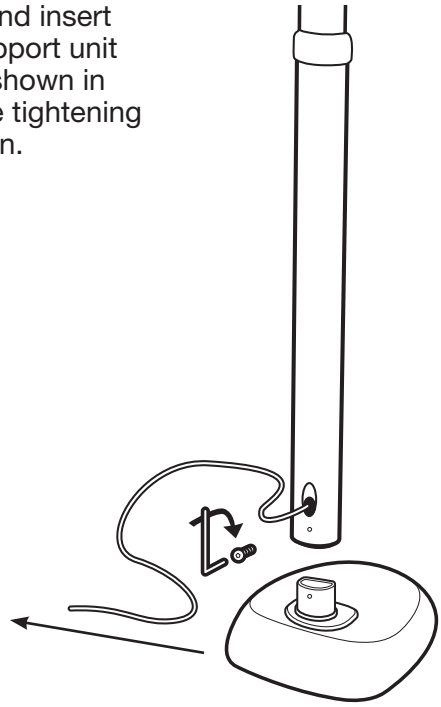

2. Hold the upper shaft with one hand and release the ergonomic height adjustment lever by gently pulling it upward as shown in Fig. 2. Extend the upper shaft approximately 12". Lock the adjustment lever by gently pushing it downward. Once assembly instructions are complete, raise or lower the upper shaft to the desired height by releasing and locking the height adjustment lever.

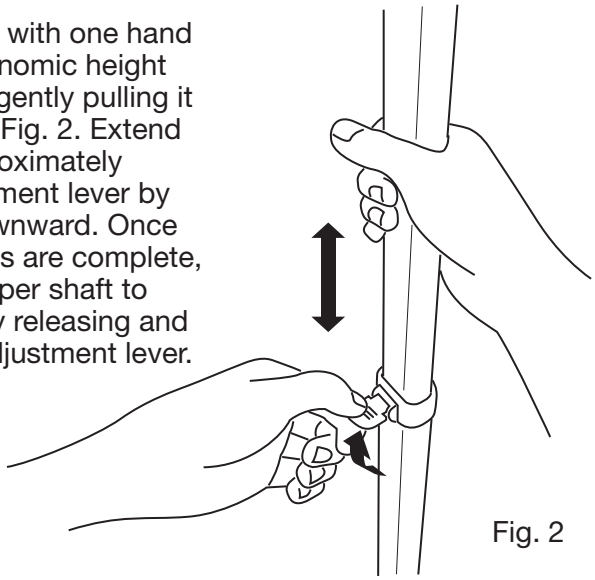

Fig. 2

3. Attach the lamp head gooseneck to the shaft until the screw holes line up as shown in Fig. 3. Use care when tucking the wire into the shaft. Form a loop with any excess wire prior to tucking it. Insert the screw using the tightening tool and turn clockwise to tighten.

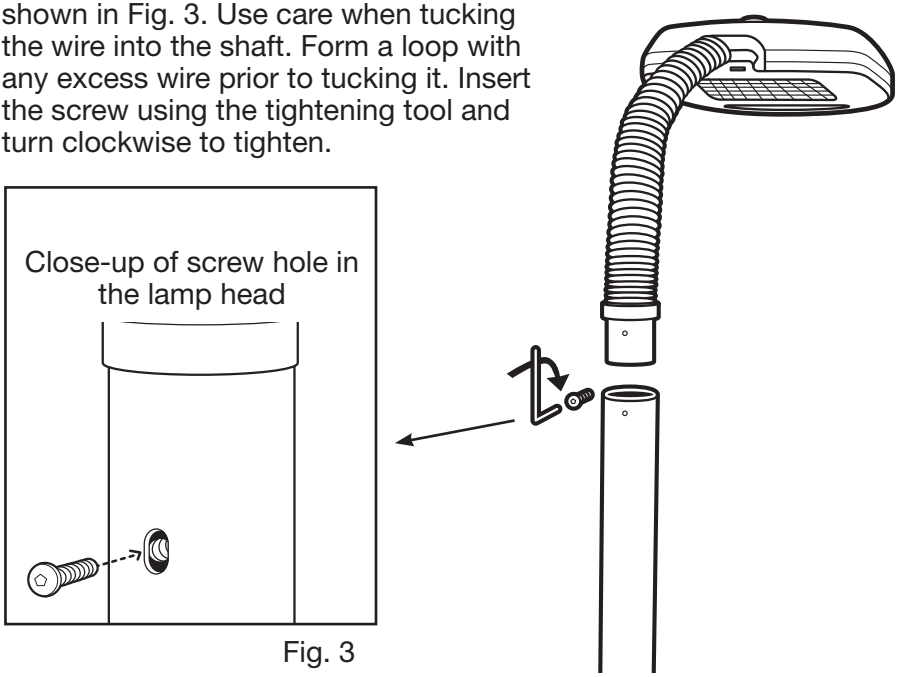

Fig. 3

4. Remove the light diffuser from the protective plastic bag. Insert the plastic pegs at the bottom of the light diffuser into the openings near the bulb socket. Snap the tab into place as shown in Fig. 4.

Note: *Be sure all styrofoam packing is removed from the bulb area prior to installing the light diffuser.*

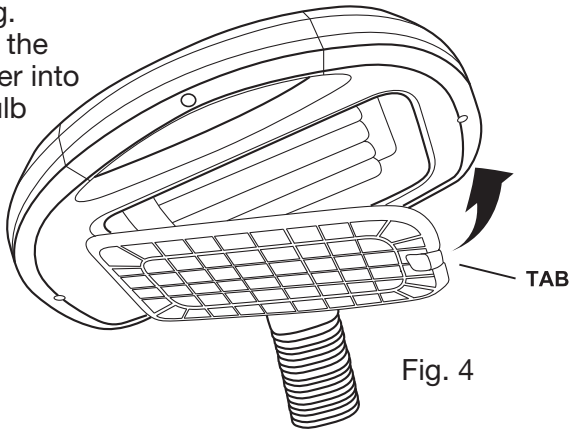

Fig. 4

Assembly Instructions — continued

5. Attach the ballast to the power cord. Use care to align the 4-pin plug properly. DO NOT FORCE. The power cord is designed to connect only one way (Fig. 5).

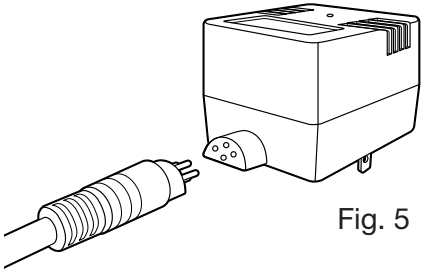

Fig. 5

6. Plug the ballast into a standard 120V 50/60Hz outlet and turn the lamp on. The green LED indicator (J) on center of the ballast will illuminate (Fig. 6). If not, please refer to the troubleshooting section of this manual (see page 11).

Note: *Green LED indicator will not illuminate if lamp is turned off or bulb is removed.*

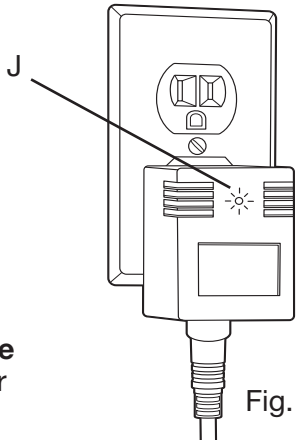

Fig. 6

WARNING: Do not block vents on the ballast. Vents are necessary for proper function of the ballast; blocking them may cause overheating of the ballast and increase the risk of fire.

ATTENTION!

ALWAYS lift your lamp by the shaft

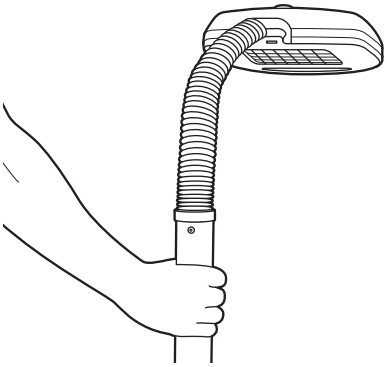

DO NOT lift the lamp by the gooseneck

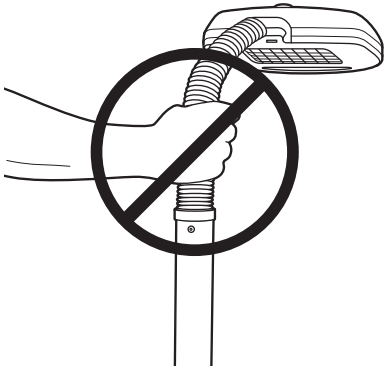

Bulb Replacement

Removal

1. Unplug the lamp from the power source.
2. To access the bulb, remove light diffuser by depressing the tab and lifting it out (Fig. 7).
3. Firmly hold the bulb base (B) and pull bulb (C) from the socket (A) in an outward motion (Fig. 8).

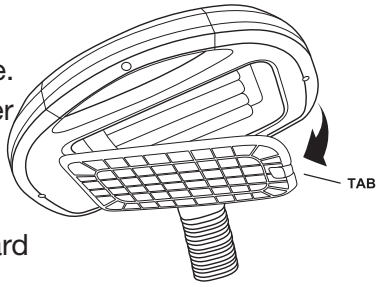

Fig. 7

Installation

1. Unplug the lamp from the power source.
2. Firmly hold the base (B) and push bulb (C) into the socket (A).
3. Be sure the bulb is firmly seated in the socket (Fig. 9) and snapped into the metal bulb clip (D).
4. Replace the light diffuser.

Attention: *Do not grip the bulb by the glass tubes. Only touch the base when removing or inserting the bulb.*

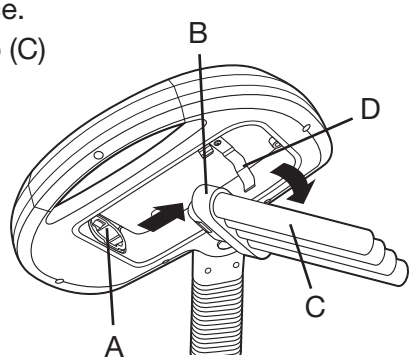

Fig. 8

Correctly Seated Bulb

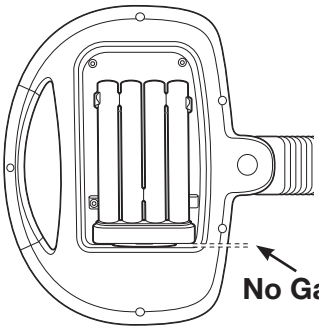

Incorrectly Seated Bulb

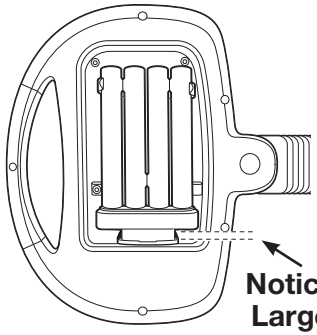

Fig. 9

Care and Cleaning

Your lamp is made from high quality materials that will last for many years with minimum care. You may want to periodically clean the lamp using a mild, non-abrasive cleaner and soft cloth. When cleaning, make sure you have turned off and unplugged the unit and allowed sufficient time for the unit to cool. All liquid should be properly wiped away and dried prior to restoring power.

CAUTION: DO NOT USE SOLVENTS OR CLEANERS CONTAINING ABRASIVES, OR AMMONIA BASED CLEANERS.

WARNING: All moisture should be properly wiped away and dried prior to restoring power.

Troubleshooting

Before Requesting Service on your Verilux® Lamp, Please Read the Following:

- Make sure all power connectors, cords and plugs are inserted fully and securely.
- Be sure the bulb is securely seated into the socket (See page 9).
- Make sure there is power to the wall outlet or try another outlet.

PROBLEM	CHECK	SOLUTION
Light Won't Come On	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb old?	Check bulb for blackening/darkening at bottom of spiral where it joins the base (an indicator of bulb life) and replace bulb.
	Is the bulb connected securely into socket?	Be sure the bulb is securely seated into socket, repeat the bulb installation process.
Blackening/Darkening at Ends of Bulb	Is the bulb new?	Sometimes when a new bulb is turned on for the first time the tube will darken, but this will fade after a few minutes.
	Is the bulb old?	With older bulbs, darkening of the tube indicates end of bulb life (this doesn't affect operation except to reduce the amount of light available since the phosphor in that area has become inactive). Bulb replacement is recommended.
Light Flickers	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process. **CAUTION:** DISCONNECT LAMP FROM OUTLET PRIOR TO REPEATING THE BULB INSTALLATION PROCESS.
	Is the lamp connected to a dimmer switch?	Connect lamp plug only to wall outlet without dimmer switch.

WARNING: *Do not block vents on ballast. Vents are necessary for proper function of the ballast; blocking them may cause overheating of the ballast and increase risk of fire.*

One Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of one year from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first year of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Note: *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our website at www.verilux.com or call our Customer Service Department at

1-800-786-6850

Representatives are available Monday — Friday, 9am — 5pm EST

verilux®

340 Mad River Park, Waitsfield, VT 05673

Printed in China for Verilux, Inc.

VF02-MAN-Rev4

© Copyright 2010 Verilux, Inc. All rights reserved.